



# IMPORTANT SUNCO Trash Discs Height Setting Instructions

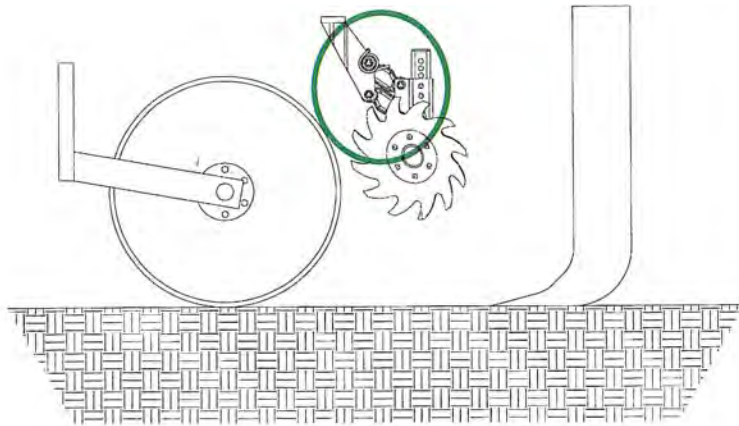

## Step 1


Install mount to machine and blades to stem. (Note the right and left blade must be installed on the proper side.)

**Important: Check 4 linkage bolts and 3 assembly mount bolts periodically during initial use for tightness.**

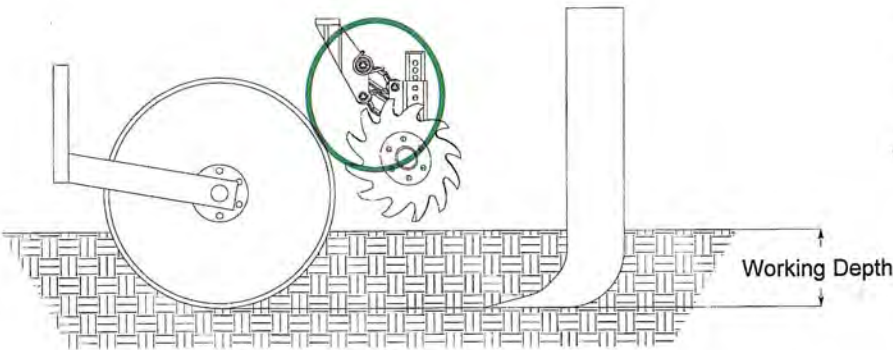


## Step 2

Go to field and set the strip till at the desired working depth. (See illustration.)

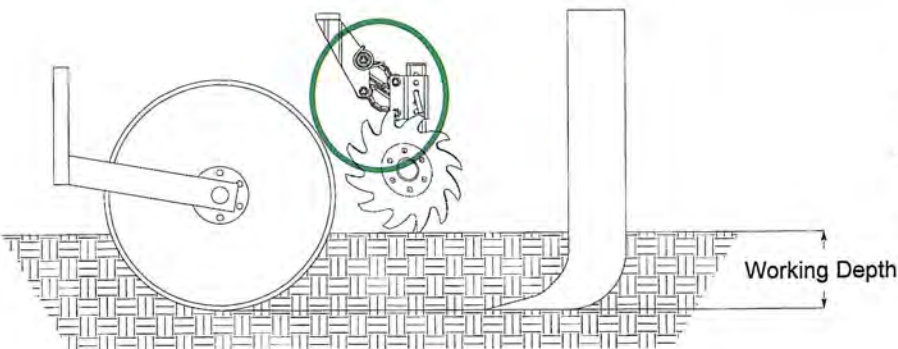

## Step 3

Lower stem in receiver tube until discs touch the top of the ground. Run a short distance and observe path cleaned. (Note: Linkages are angled down - this is the correct running angle! See illustration.)

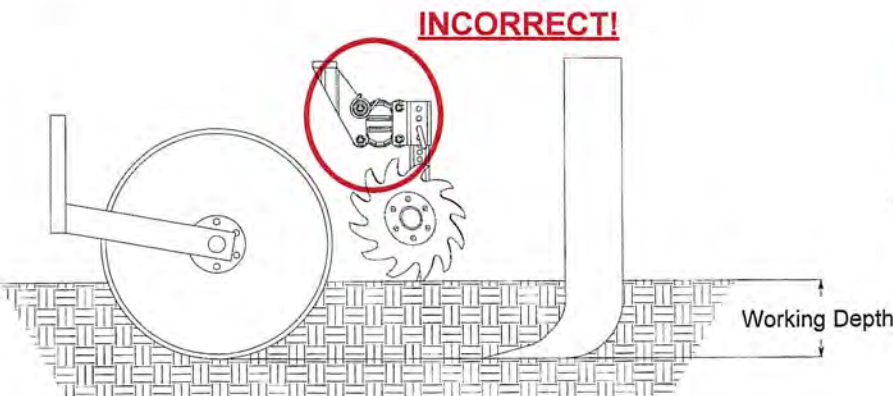

## Incorrect Height Setting

**Do Not** lower discs to make parallel linkages run level. (see illustration.) Excessive material moved, and wear will result, plus possible damage to assembly.